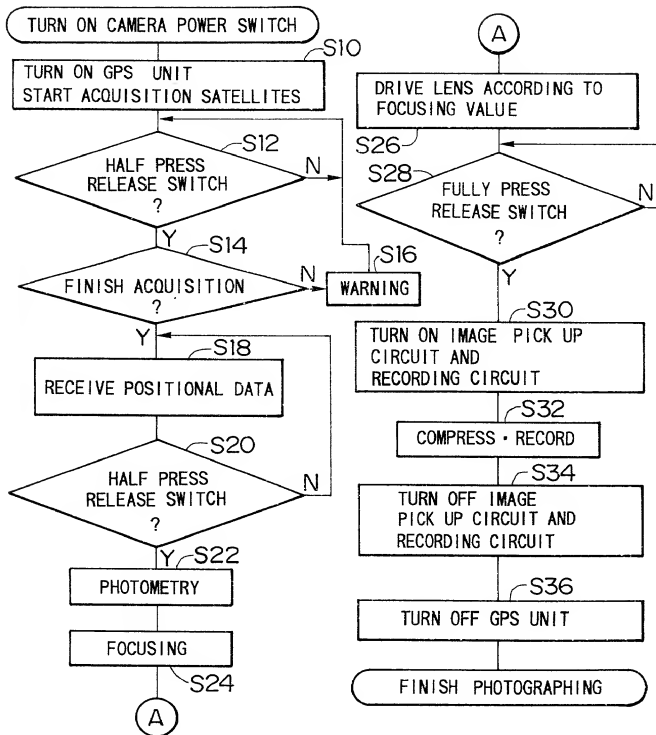 


FIG. 2





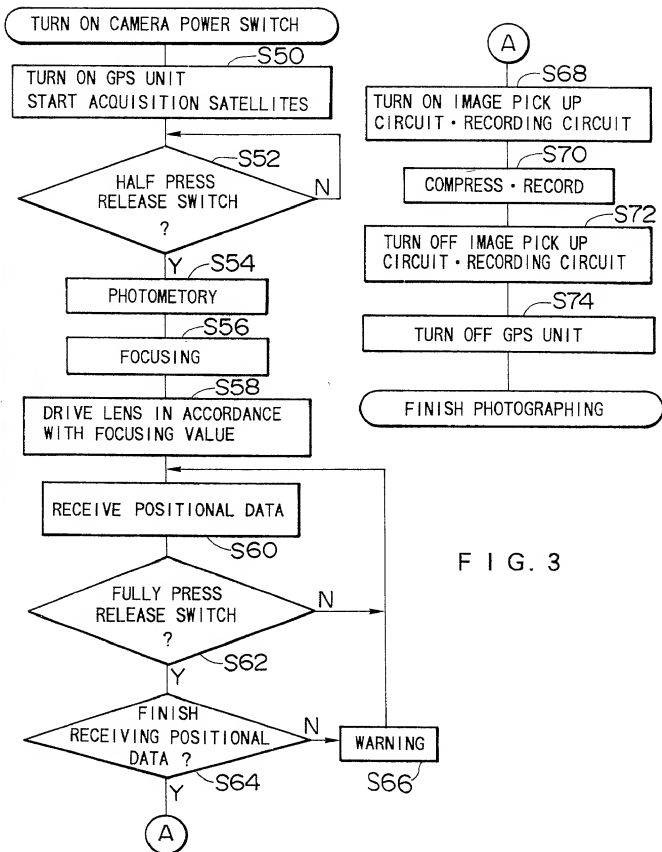 


FIG. 3

 FIG. 4

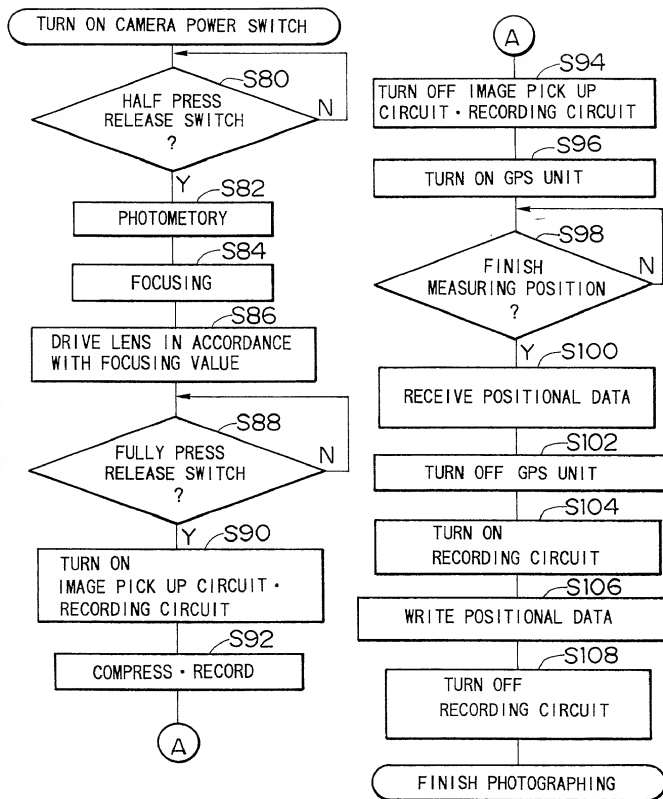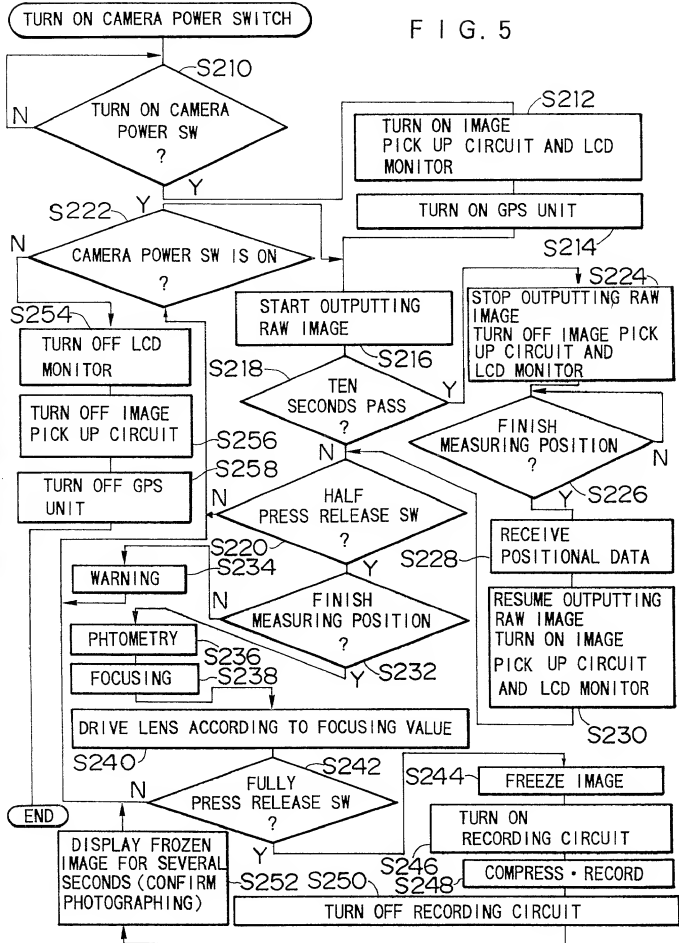

F I G. 5

 


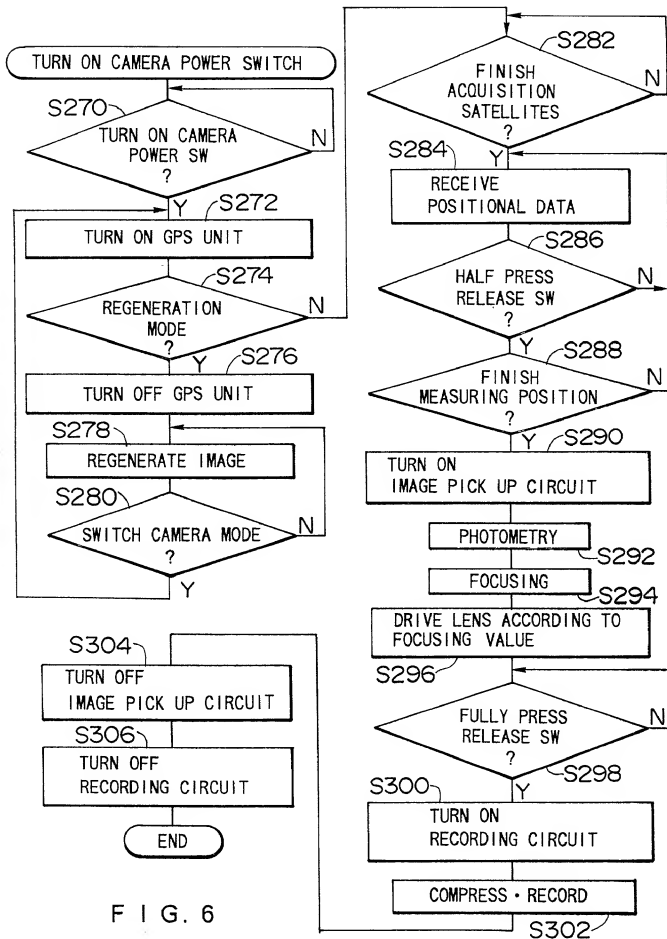 


FIG. 6

 FIG. 7

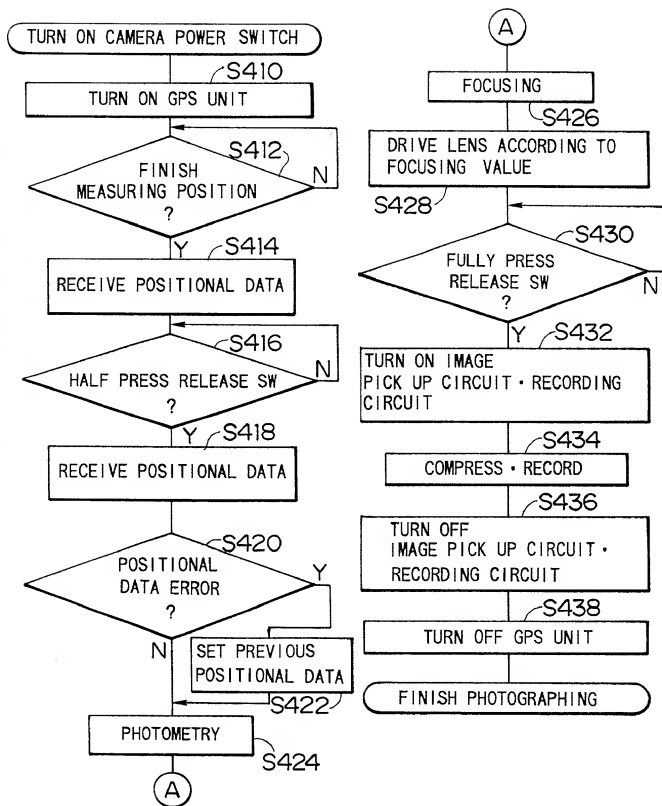

TURN ON CAMERA POWER SWITCH

FIG. 8

TURN ON GPS UNIT

S450

FINISH
MEASURING POSITION
?

S452

N

S454

RECEIVE POSITIONAL DATA

RECEIVE POSITIONAL
DATA

S456

POSITIONAL DATA MATCH
?

S458

S460

POSITIONAL
DATA
DO NOT MATCH A PRESET
NUMBER OF TIMES
?

Y

WARNING

S462

TIMER TIME
HAS PASSED
?

S466

HALF
PRESS RELEASE SW
?

S464

PHOTOMETRY

S468

FOCUSING

S470

S472

DRIVE LENS ACCORDING TO FOCUSING VALUE

FULLY PRESS
RELEASE SW
?

S474

S476

TURN ON IMAGE PICK UP
CIRCUIT • RECORDING CIRCUIT

COMPRESS • RECORD

S478

S480

TURN OFF IMAGE PICK UP
CIRCUIT • RECORDING CIRCUIT

TURN OFF GPS UNIT

FINISH PHOTOGRAPHING

S482

Copyright © 2004 by Nikon Corporation


 
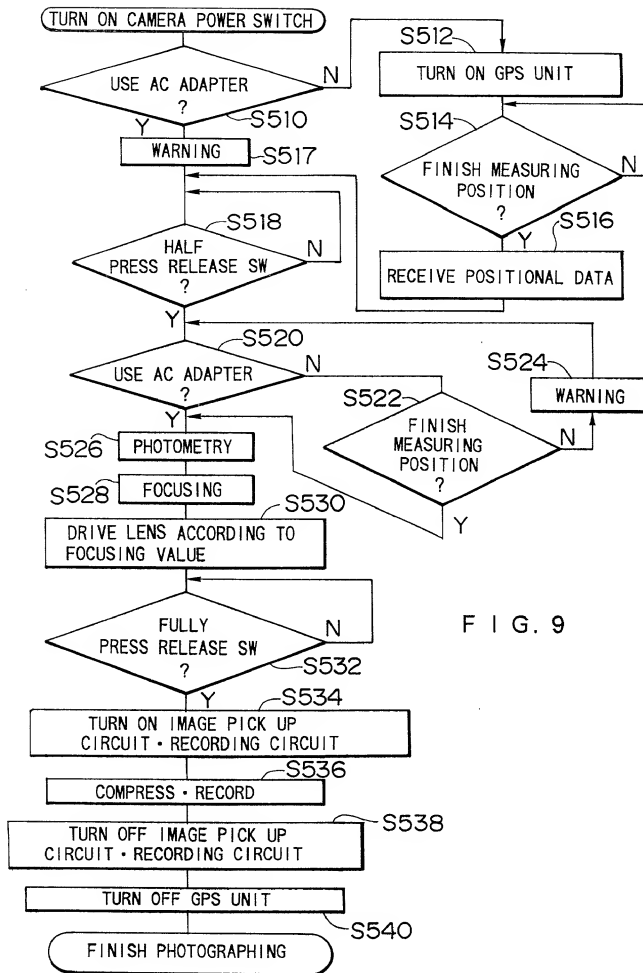 


FIG. 9

TURN ON CAMERA POWER SWITCH

FIG. 10

 
TURN ON GPS UNIT S550



COLORIMETRY S556

PHOTOMETRY S558

 
FOCUSING S560



WARNING

S568

 DRIVE LENS ACCORDING
TO FOCUSING VALUE

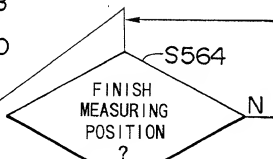

RECEIVE
POSITIONAL DATA



TURN ON IMAGE PICK UP CIRCUIT ·
RECORDING CIRCUIT

COMPRESS · RECORD S572

TURN OFF IMAGE PICK UP
CIRCUIT · RECORDING CIRCUIT S574

TURN OFF GPS UNIT S576

FINISH PHOTOGRAPHING S578


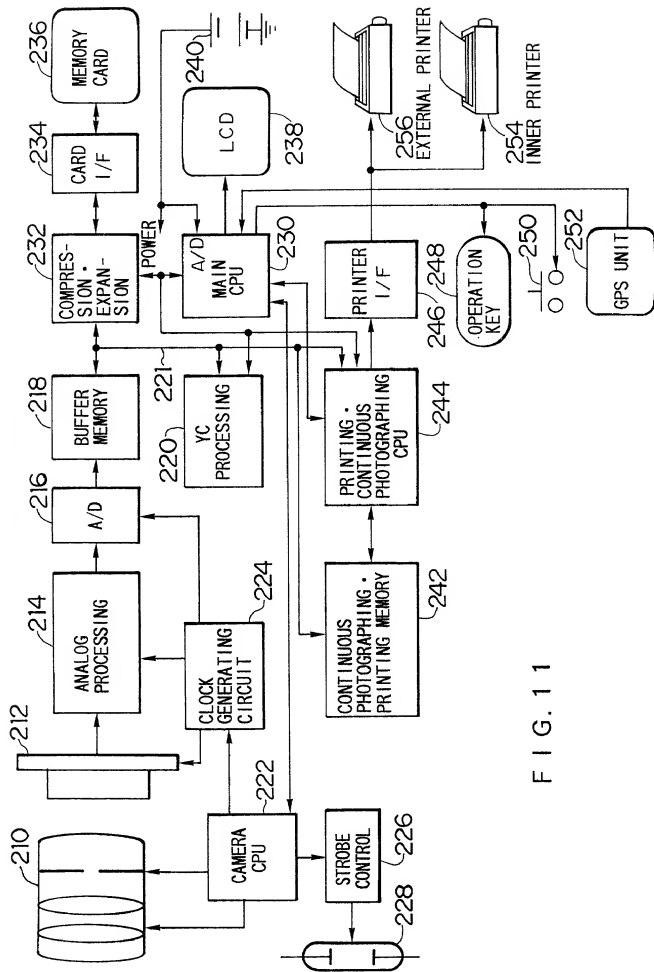 


FIG. 1

TURN ON POWER
SWITCH

 FIG. 12

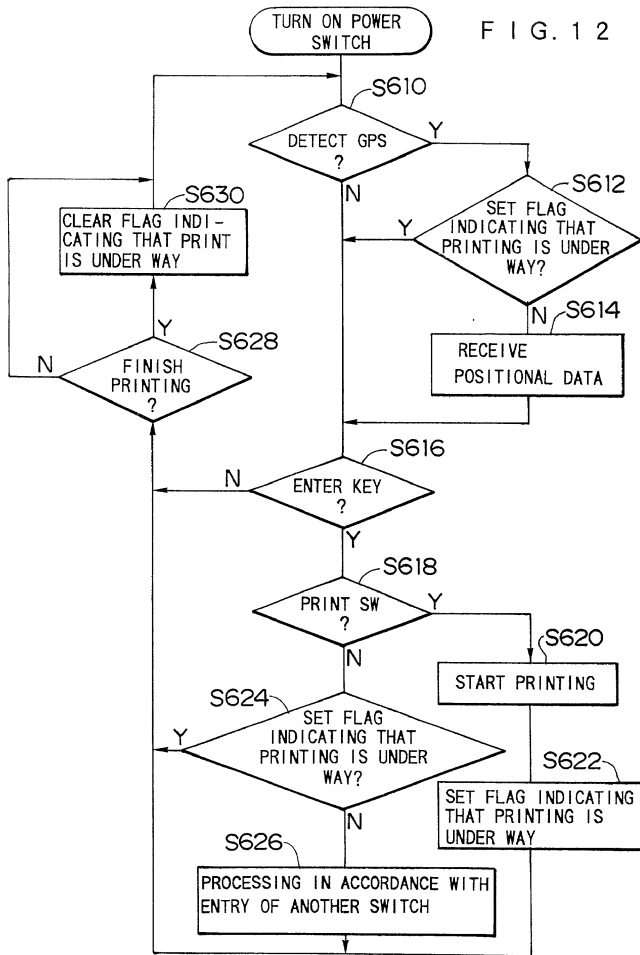

0736499.000101

TURN ON POWER SWITCH

FIG. 13


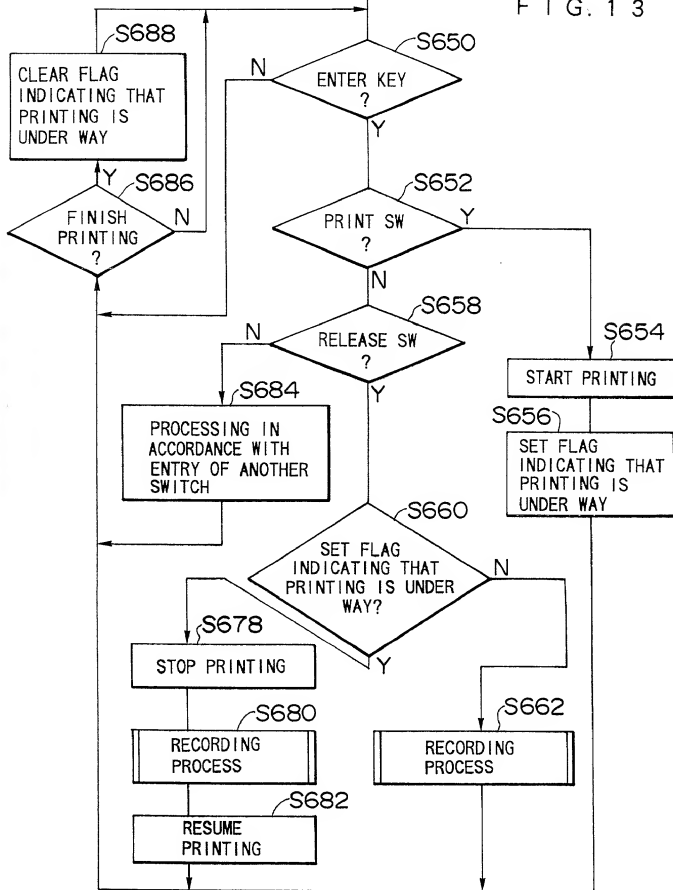 


FIG. 14

 

TURN ON POWER SWITCH

FIG. 15

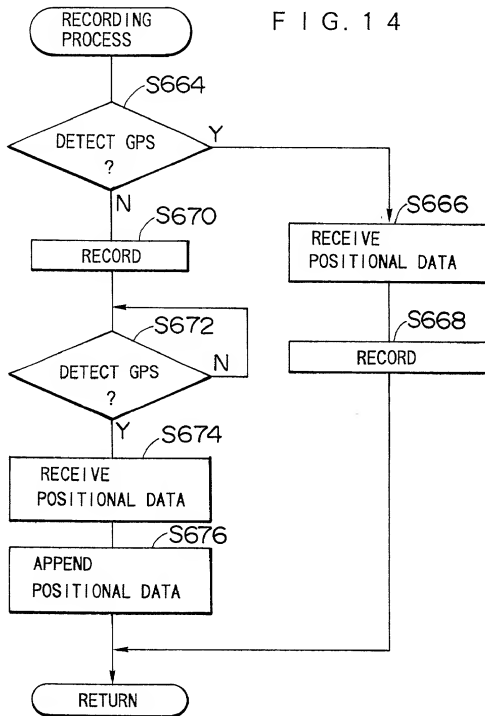